



Knock Sensor Adapter #1

It is used for the vehicles with which retarding compensation of the ignition time by the knock sensor is effective too much.

- and ECU side is wired in green line 1. The knock signal line 1 is cut, a sensor side is wired in the white line of an adapter,
- 2. The knock signal line 2 is cut, a sensor side is wired in yellow line of an adapter and ECU side is wired in brown line (only vehicles with two knock signals)
- A ground is wired in black line of an adapter

