# **600 WARNING METER**

Covers Part Numbers 16000803, 16000804 and 16000822

EXHAUST TEMP METER


Instruction Manual

TRUST CO.,LTD.

MADE IN JAPAN.


### nstallation

External Warning Option Output

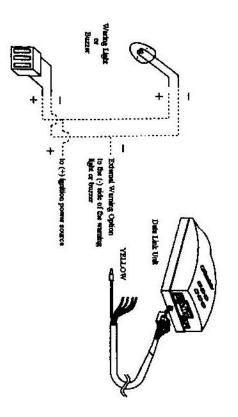

### Operation:

burdanion Bulb Cap

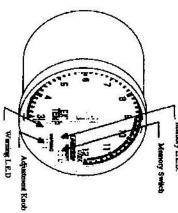



- O Used to switch to "Peak" mode
- O Used to reset the memory
- Memory L.E.D.
- O Flashes when resetting the memory
- Adjustment Knob


  Used to adjust the warning point (setting)
- Warning L.E.D.
- O Illuminates when in the warning mode
- O Flashes when the harrness is disconnected or when there is a "short" in the electrical system

### nstallation

Wiring Diagram


Caution: Route the sensor harness well away from all ignition systems. Noise (signals) from the ignition system can cause faulty readings.

Install the EGT sensor so that 5-20mm of the probe is in the center of the exhaust pipe.

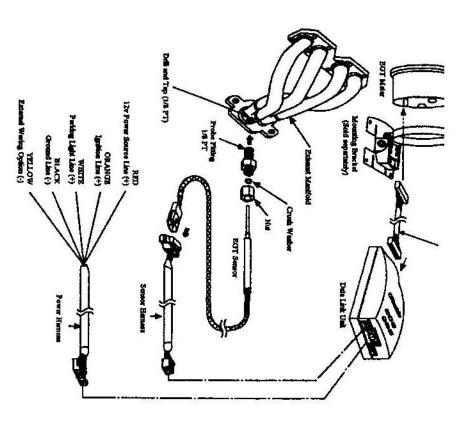


### Operation:

## Real-time Meter Mode:

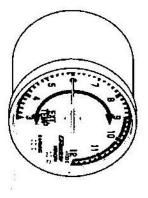

Displays the exhaust gas tempature

## Peak Tempature Mode:

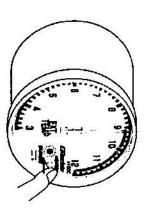



Press memory switch momentarily to get into "peak mode"

When "peak mode" is turned on, the memory LED will illuminate and the meter will display the peak tempature achieved.


Press the memory switch again, to return to "real-time mode"

### Resetting the Memory

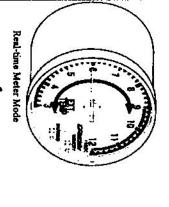


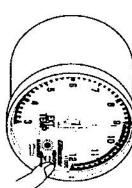


Peak Mode

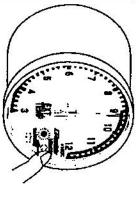

Press the memory switch for over 2 soc., to reset the memory

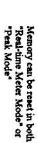

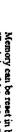



Important

important instruments. have the meter interfer with the driver's veiw of the road or other When looking for a location to mount the meter, be sure not to


Note

installation. Mounting brackets for these warning meters are avalible for simple

(GReddy Meter Band 369601 or GReddy Meter Holder 369602)

Caution

meter horizontally or facing upward. Mounting the meter facing downward can cause the meter to malfuction. Never mount the meter facing downward. Always mount the

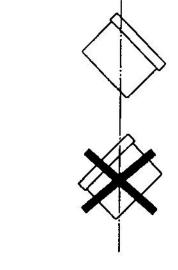

Operation:

Setting the Warning Point

Data Link Unit Mounting

clean the mounting surfaces with the provided dash cleaner When using the provided double-sided tape to mount the data link unit,

 $\triangleright$ Do not use the dash cleaner on any other products.


₽ double-sided tape may not adhere to the dash. If there is dirt, dust, or oil on the mounting surface, the

**Back of Data Link Unit** 

Dash Cleaner

How to use:


and the dash surface, to be mounted Wipe the back of the data link unit remove the dash-cleaner. Tear the silver package open and

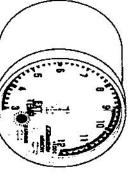

To set the warning point, use the provided socket tool to turn the Adjust Knob to the desired warning value

After making the adjustment, wait for 5 sec. and the moter will progatant the new setting and return to "Real-time Meter Mode"



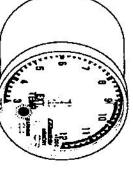

programed warning point, the "Warning LED" (and optional warning light and/or buzzer) will activate. This will remain until the neddle drops When the neddle of the meter reaches the below the warning point.


Do not adjust the Warning Point when Driving.

Always remove the adjusting socket tool after making adjustments

Ç

### peration: Check Mode


# **Bad Harness Connection Check Feature**

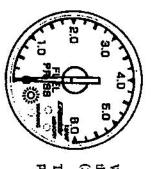

When there is a bad sensor or connection the warning LED will flash quickly. (flash, flash -- flash, flash --flash, flash)

power harness. This feature does not check the connection on

### Short Cicuit Check Feature

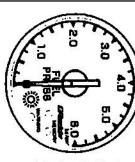


When there is a short circuit in the sensor or harness, the warning LED will flash slow. (flash -- flash)

power harness. This feature does not check for short circuits on

### Parts List:



[8] Double-sided Tape

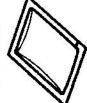

[9] Mounting Cleaner (for double-sided tape)



[10] Electrical Tap

dpcs.

999

[12] Harness Labels Set Ŕ

[11] Wire Tie 15cm


4pcs.


[14] Warning Adjusting Socket

[13] Instruction Manual

ğ


### Parts List:

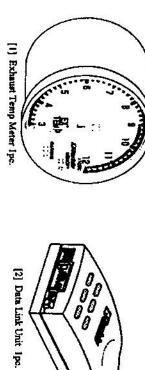

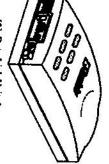

[3] Temp. Sensor 60cm lpc.

[4] Sensor Harness

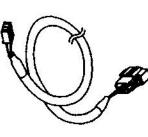

[5] Electical Harmons 0.5m lpc.

[6] Sensor Harness 3m ipc.

[7] Sensor Fitting tpc.

# Suggestions:

How to use the Harness Labels

meter type. If you are installing more than one warning meter, it is suggested to use the provided decal set to label each of the harness for each indivisual

The decal set includes three labels: 1) Meter harness 2) Sensor Harness 3) Power Harness. Install as shown below.

