F.Reddy




This adapter for Nissan Vehicles with CAN communication. This adapter will create an RPM signal from the ignition coil signals.

If the ECU is not stock, it may cause the the adapter to not operate properly at high RPM.

《How to Connect》

- 1. Connect the Yellow wire (no specific order) to each ignition coil channel.
- 2. Connect the Black wire to Ground.
- 3. Connect the Brown wire to the e-manage RPM wire (Brown).

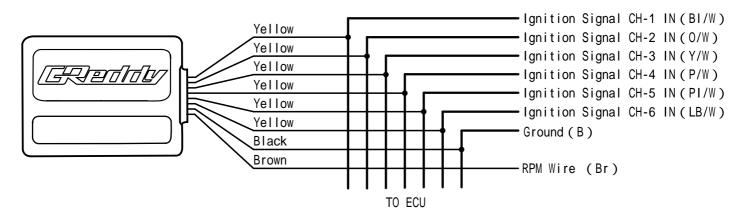

FReddy



回転信号取り出し アダプタ 1

日産CAN通信車両等のエンジン回転信号がない車両で、各点火信号から、 e-manageへ配線する回転信号を作ります。

ECUが純正状態ではない場合、高回転でe-manageが回転数を認識できなく なる可能性があります。

《配線方法》

- 1. アダプタの黄線を各点火信号入力線(ECUとe-manageの間)に配線します。
- 2. アダプタの黒線をアースに配線します。
- 3. アダプタの茶線をe-manageの茶線に配線します。

