


# RPM Adapter 3

This adapter creates an RPM signal from the ignition coil signals.  
Designed to use for Mazda RX8(SE3P).

## 《How to Connect》

1. Connect the adapter yellow wires to the ignition signal wires.  
When using the e-manage ignition harness, connect to input channels.  
For the RX8(SE3P), connect the yellow wires to the Leading Coils only.
2. Connect the Black wire to Ground.
3. Connect the Brown wire to the e-manage RPM wire (Brown).

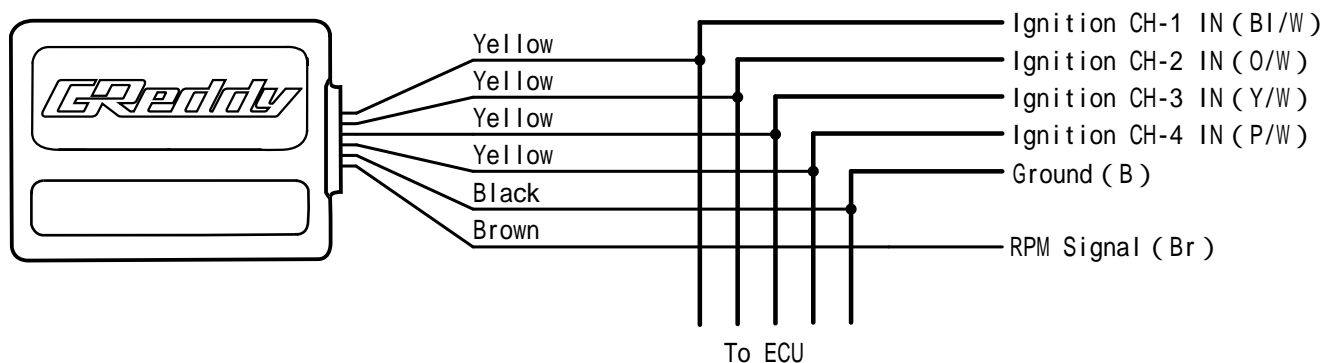

# 回転信号取り出し アダプタ3

RX8(SE3P), グランディス(NA4W)等で、点火信号からe-manageへ配線する  
回転信号を作ります。

## 《配線方法》

1. アダプタの黄線を各点火信号線に配線します。  
e-manageで点火制御を行っている場合、点火信号の入力側に配線して下さい。  
RX8(SE3P)の場合、L側の点火信号(2本)のみに配線して下さい。
2. アダプタの黒線をアースに配線します。
3. アダプタの茶線をe-manageの茶線に配線します。

